


AD Enclosure - N01

Search and Secure Procedure

N01
N01.V0.1

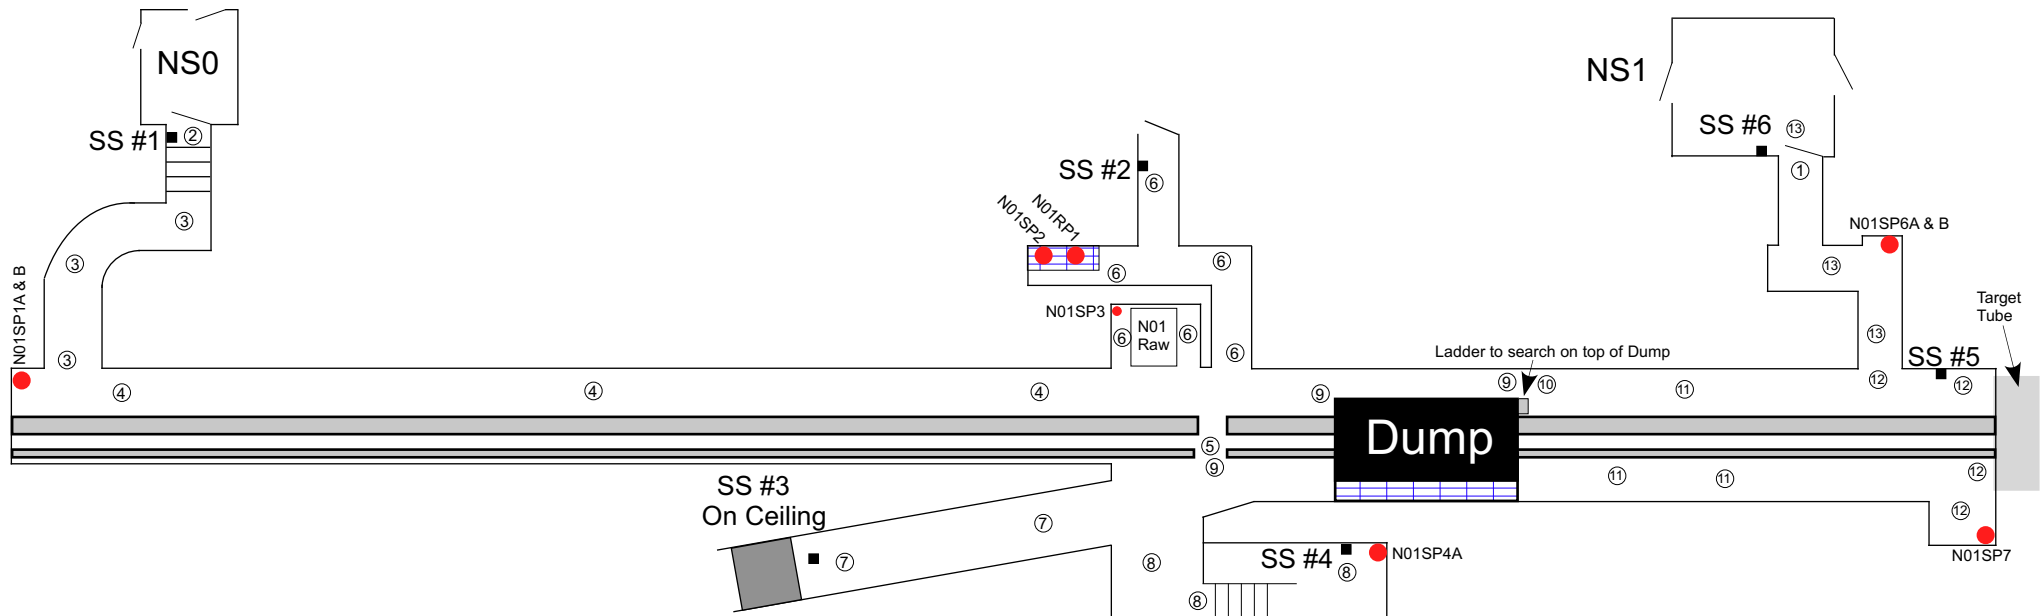

- 1) "A" and "B" enter the Enclosure and proceed upstream to Search & Secure Box #1.
- 2) "A" and "B" resets Search & Secure Box #1.
- 3) "A" and "B" sweep the stairway to the tunnel.
- 4) "A" and "B" sweep the tunnel, checking behind and over the magnets to the main hall.
- 5) "A" holds while
- 6) "B" checks behind the RAW system and sweeps the hallway to reset Search & Secure Box #2.
- 7) "B" sweeps the spur to reset Search & Secure Box #3, which is on the ceiling.
- 8) "B" sweeps the stair to the NM line and resets Search & Secure Box #4.
- 9) "B" rejoins "A" and they proceed downstream to the downstream end of the Dump.
- 10) "A" holds while "B" climbs the ladder to check on top of the Dump.
- 11) "A" and "B" sweeps downstream to the exit, checking behind and over the magnets.
- 12) "A" holds while "B" sweeps the area, checking sump area, the target tube area and resets Search & Secure Box #5.
- 13) "A" and "B" sweeps the hallway, exits the enclosure and resets Search & Secure Box #6.

Reviewed AD/RSO

Date

Approved AD/RSO

Date